


Solenoid Valve Installation Tip

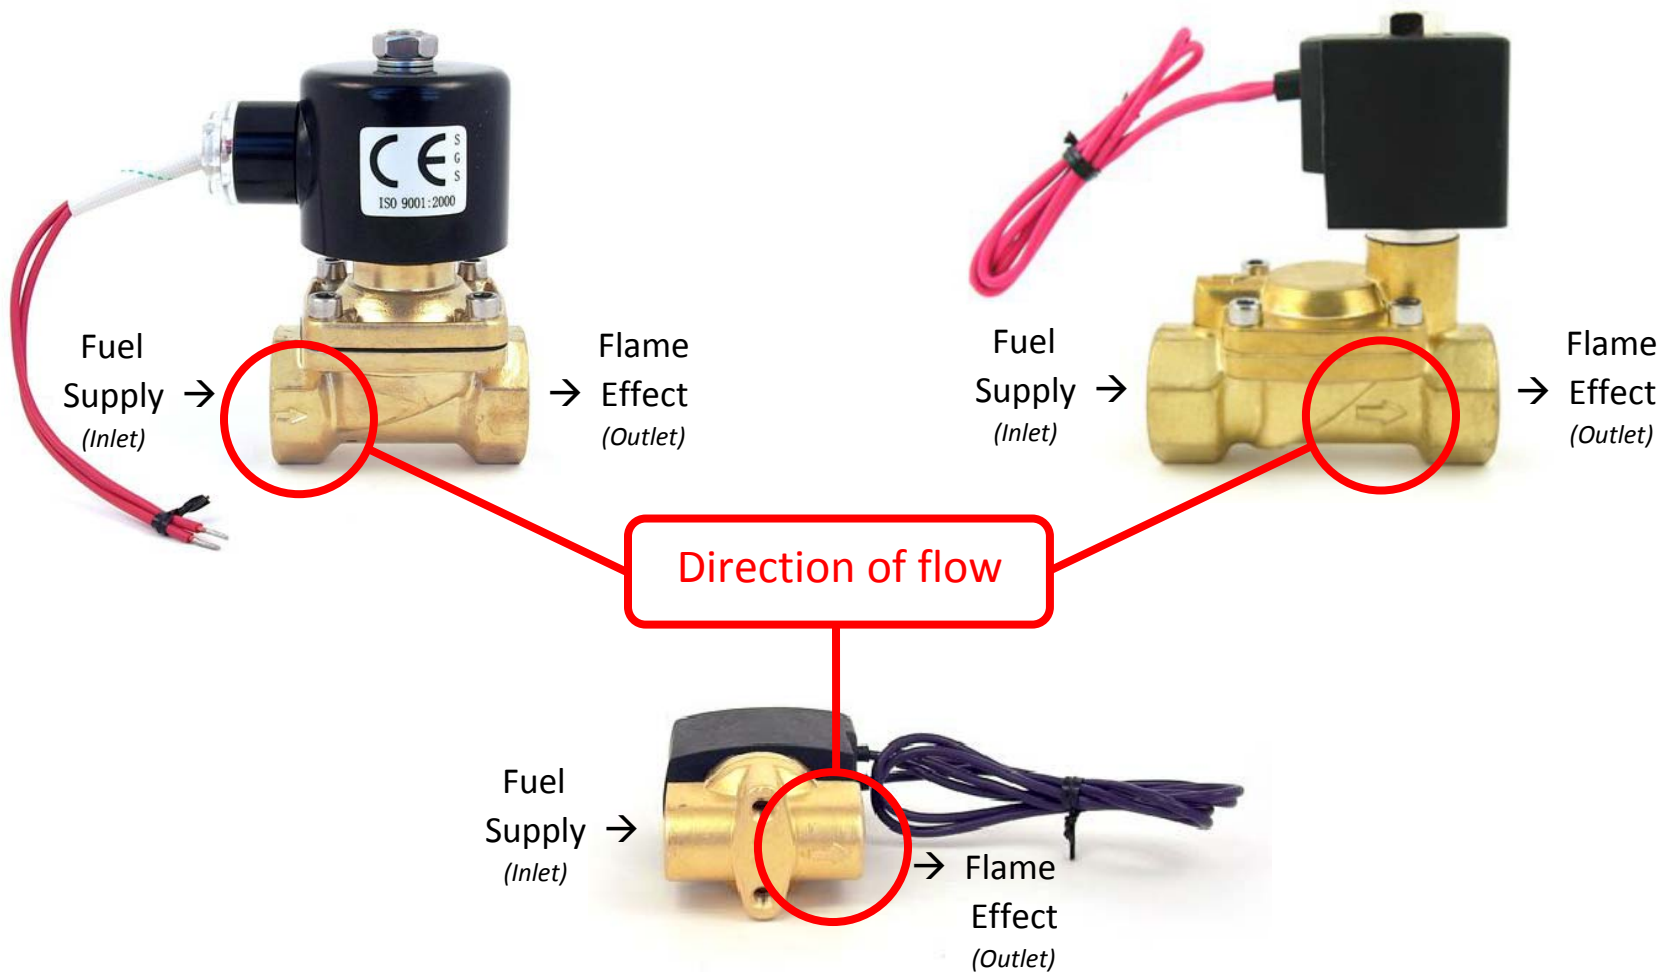

IMPORTANT: To operate correctly, all solenoid valves must be installed with the arrow cast on the body pointing in the direction of flow. If there is no arrow, observe the “IN” and/or “OUT” markings.

WARNING: You must follow the valve manufacturer’s instructions regarding media compatibility, pressure limits, installation and operation.